





iPro SERIES

(v.3.5)

1. IMPORTANT RECOMMENDATIONS

- The  symbol alerts the user of non-insulated “dangerous voltage” within the product area that is sufficiently high to constitute a risk of electric shock to persons.
- The  symbol alerts the user of important operating and maintenance (assistance) instructions found in the documentation attached to the device.
- Dixell Srl cannot accept any liability for damages caused by modems that are not supported. Dixell Srl reserves the right to modify this manual without prior notice. The documentation can be downloaded from www.dixell.com even prior to purchase.
- This manual forms part of the product and must always be kept near the device for easy and quick reference. The device cannot be used as a safety device. Verify the limits of application before using the device.
- Verify that the power supply voltage is correct before connecting the device. Do not expose it to water or humidity: use the controller only within the operating limits, avoiding sudden changes in temperature and high atmospheric humidity in order to prevent condensation from forming. Recommendation: disconnect all the electric connections before performing any maintenance. Insert the probe where it cannot be reached by the End User. The device must not be opened. Consider the maximum current that can be applied to each relay. Make sure that the wires for the probes, the loads and the electrical power supply are separated and sufficiently distant from each other, without crossing or intertwining with each other. In the case of applications in industrial environments, it may be useful to use the main filters (our mod. FT1) in parallel to the inductive loads.
- The customer shall bear full responsibility and risk for product configuration in order to achieve the results pertaining to installation and/or final equipment/system. Upon the customer's request and following a specific agreement, Dixell s.r.l. may be present during the start-up of the final machine/application, as a consultant, however, under no circumstances can the company be held responsible for the correct operation of the final equipment/system.
- Since Dixell products form part of a very high level of technology, a qualification/configuration/programming/commissioning stage is required to use them as best as possible. Otherwise, these products may malfunction and Dixell cannot be held responsible. The product must not be used in any way that differs from that stipulated in the documentation.
- The device must always be inserted inside an electrical panel that can only be accessed by authorised personnel. For safety purposes, the keyboard must be the only part that can be reached.
- The device must never be hand-held while being used.
- It is good practice to bear the following in mind for all Dixell products:
 - Prevent the electronic circuits from getting wet as contact made with water, humidity or any other type of liquid can damage them. Comply with the temperature and humidity limits specified in the manual in order to store the product correctly.
 - The device must not be installed in particularly hot environments as high temperatures can damage it (electronic circuits and/or plastic components forming part of the casing). Comply with the temperature and humidity limits specified in the manual in order to store the product correctly.
 - Under no circumstances is the device to be opened - the user does not require the internal components. Please contact qualified service personnel for any assistance.

- Prevent the device from being dropped, knocked or shaken as either can cause irreparable damage.
- Do not clean the device with corrosive chemical products, solvents or aggressive detergents.
- The device must not be used in applications that differ from that specified in the following material.



➤ ***Separate the power of the device from the rest of the electrical devices connected inside the electrical panel. The secondary of the transformer must never be connected to the earth.***

- Dixell Srl reserves the right to change the composition of its products, even without notice, ensuring the same and unchanged functionality."

1.1 PRODUCT DISPOSAL (WEEE)

With reference to Directive 2002/96/EC of the European Parliament and of the Council of 27 January 2003 and to the relative national legislation, please note that:

- There lies the obligation not to dispose of electrical and electronic waste as municipal waste but to separate the waste.
- Public or private collection points must be used to dispose of the goods in accordance with local laws. Furthermore, at the end of the product's life, it is also possible to return this to the retailer when a new purchase is made.
- This equipment may contain hazardous substances. Improper use or incorrect disposal can have adverse effects on human health and the environment.
- The symbol shown on the product or the package indicates that the product has been placed on the market after 13 August 2005 and must be disposed of as separated waste.
- Should the product be disposed of incorrectly, sanctions may be applied as stipulated in applicable local regulations regarding waste disposal.

2. INTRODUCTION

The iPRO is the range of programmable controllers manufactured by Dixell.

The range consists of programmable controllers, I/O expansions, drivers for electronic valves and graphical interfaces adapted to cover any type of application in the air-conditioning sector, cooling sector and any relative area. As the system is one of the most technologically advanced, it is flexible and can be customised for it to be adapted to the user's particular requirements.

3. GENERAL SPECIFICATIONS

The Dixell programmable controllers are all powered at 24Vac/dc and use a high speed performance 32-bit ARM9 (200 MHz) microprocessor. The models differ in size (10 DIN or 4 DIN) and number of inputs and outputs (analogue and digital).

One of the features that distinguish the iPRO controllers is the wide range of connection options with external Dixell devices and, as well, third part devices. CANBus, RS485 Master and Slave, and an Ethernet and USB port provide maximum flexibility of integration with the outside world. MODBUS RTU protocol, one of the most popular in the world, is used for serial communication.

Up to 80 MB of flash memory are entirely available to the user, according to the model. All the inputs and outputs are fully configurable.

3.1 PROCESSING ENVIRONMENT

All Dixell programmable controllers use the following software as a processing environment:

- ISaGRAF® to process the iPRO application.
- VISOPROG to process the LCD graphic interface application (VISOGRAPH)

ISaGRAF® software is used worldwide and allows those with no programming experience to build applications ranging from the simplest to the more sophisticated. The vast range of the most popular programming languages (Structured Text, Function Block Diagram, Ladder Diagram, Instruction List, Sequential Function Chart, Flow Chart, FBD IEC 61499) provides all programmers with access to the processing environment. Thanks also to the extensive libraries of blocks already developed by Dixell, the processing and debug times are reduced.

The SIMULATION (verification of the application without using the controller) and DEBUG options (verification of the actual application within the controller), allow the user to block and force the value of the variables to speed up the testing times.

3.1.1 Fields of application

The possibility of all-round configuration allows the Dixell iPRO programmable controller to be used for any type of application. The same applications can be downloaded in the various models available (obviously adapting the number of inputs and outputs).

The hardware has already been used for the following applications:

- Chillers and heat pumps
- Air treatment units
- Air-conditioners
- Roof-tops
- Cooling systems
- Energy saving management in systems
- Climatic chamber control
- Cold rooms and seasoner cabinets

3.1.2 Hardware architecture

The iPRO programmable controller is structured as follows:

- 32-bit microprocessor used to run the application
- Removable connectors (Molex) or bayonet connectors (Phoenix)
- The programme and parameters are stored in a permanent flash memory. No data is lost in case of power failure.
- Internal web server with the Dixell website as default with the option of downloading a customised website for reading and writing variables with synoptic creation (via HTML).
- Ethernet port.
- USB port.

- Connection to the dedicated remote LCD display.
- CANBus.
- RS485 Master.
- RS485 Slave.

The remote LCD display has the following features:

- 240x96 pixel LCD graphic display.
- 32-bit processor.
- Multilingual in ASCII or UNICODE version.
- 8 fully programmable keys.
- Panel or wall mounted.


The LED display (only for the 4 DIN versions) has the following features:

- Configurable digits and icons
- 6 fully programmable keys







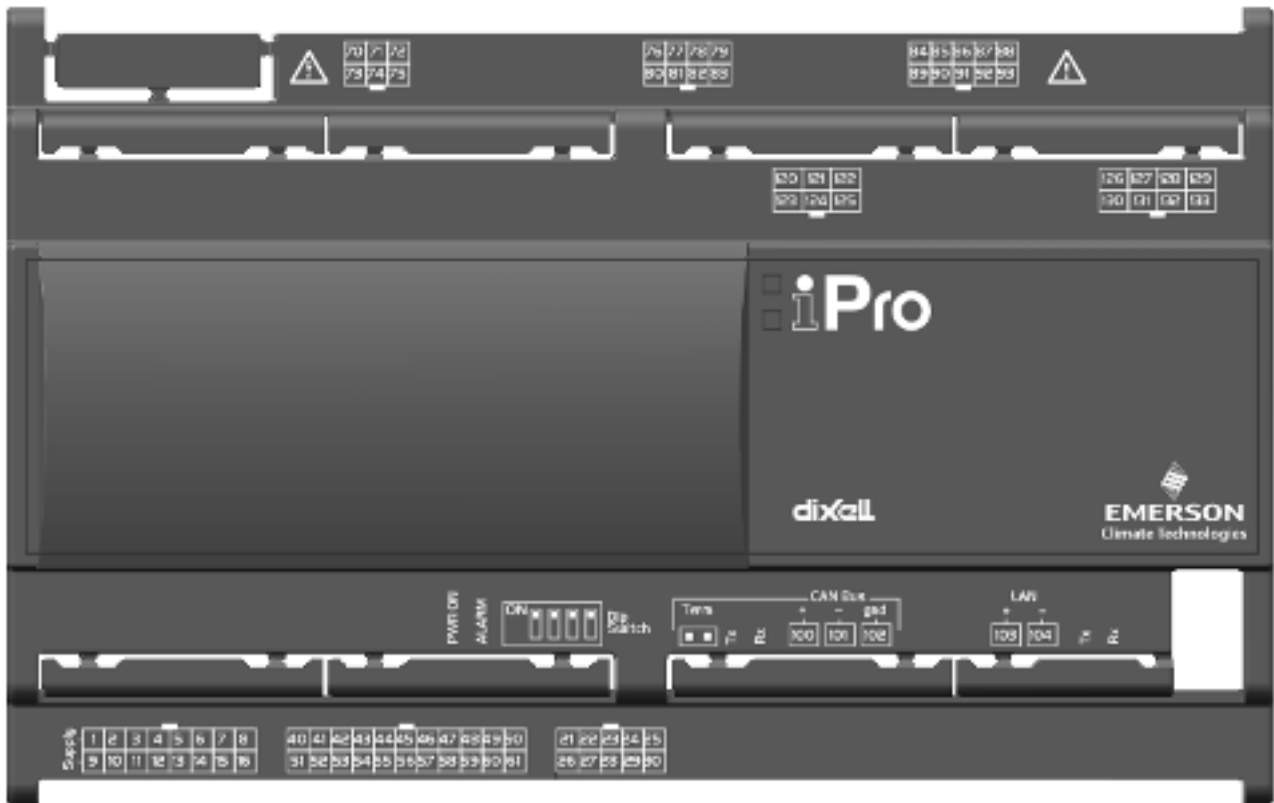


3.2 RELEVANT DATA




Operating temperature:	-10 to +60°C (14 to 140°F)
Relative humidity:	20 to 85%

4.9 IPX115D – IPX125D

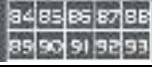

4.9.1 Description of the connections

Connector	Description
	Connector for 24Vac/dc power supply Analogue inputs (Pb1 - Pb10, PbC) Additional power (+5Vdc, +12Vdc, GND)
	Opto-insulated analogue outputs (Out1 - Out6, GND) 24Vac/dc power supply for the opto-insulated analogue output
	Potential free opto-insulated digital inputs (DI1 - DI20, DIC) Opto-insulated 24Vac/dc digital inputs (DI1 - DI20, GND)
	LAN serial port connector Rx and Tx LED to indicate that communication is active
	CANBUS Connector Rx and Tx LED to indicate that communication is active Line terminal (Term)
	Dip-switch to set the address of the device.
	Digital relay outputs 3 NO relays + 1 changeover relay, 1 common
	Digital relay outputs 6 NO relays, 2 common
	Digital relay outputs 3 NO relays + 2 changeover relays, 3 common

	Digital outputs with SSR relays (IPX125D) 4 NO relays, 2 common
	Digital relay outputs (IPX125D) 6 NO relays, 2 common
	Green power LEDs (PWR ON) and red alarm signal LED (ALARM) See relative paragraph

4.9.2 Description of the inputs and outputs


Input No.	Type of Input	Description
1	Supply	Reference “-“/GND power (24Vac or 24Vdc)
2	Pb1	Configurable analogue input 1 (NTC, PTC, PT1000, 0 - 20mA, 4 - 20mA, 0 - 10V, 0 - 1V, 0 - 5V, DI)
3	Pb2	Configurable analogue input 2 (NTC, PTC, PT1000, 0 - 20mA, 4 - 20mA, 0 - 10V, 0 - 1V, 0 - 5V, DI)
4	Pb3	Configurable analogue input 3 (NTC, PTC, PT1000, 0 - 20mA, 4 - 20mA, 0 - 10V, 0 - 1V, 0 - 5V, DI)
5	Pb4	Configurable analogue input 4 (NTC, PTC, PT1000, 0 - 20mA, 4 - 20mA, 0 - 10V, 0 - 1V, 0 - 5V, DI)
6	Pb5	Configurable analogue input 5 (NTC, PTC, PT1000, 0 - 20mA, 4 - 20mA, 0 - 10V, 0 - 1V, 0 - 5V, DI)
7	PbC	Common analogue inputs (NTC, PTC, PT1000, DI)
8	GND(-)	Additional power reference 5Vdc and 12Vdc and analogue inputs (0 - 20mA, 4 - 20mA, 0 - 10V, 0 - 1V, 0 - 5V)
9	Supply	Reference “+“ power supply (24Vac or 24Vdc)
10	Pb6	Configurable analogue input 6 (NTC, PTC, PT1000, 0 - 20mA, 4 - 20mA, 0 - 10V, 0 - 1V, 0 - 5V, DI)
11	Pb7	Configurable analogue input 7 (NTC, PTC, PT1000, 0 - 20mA, 4 - 20mA, 0 - 10V, 0 - 1V, 0 - 5V, DI)
12	Pb8	Configurable analogue input 8 (NTC, PTC, PT1000, 0 - 20mA, 4 - 20mA, 0 - 10V, 0 - 1V, 0 - 5V, DI)
13	Pb9	Configurable analogue input 9 (NTC, PTC, PT1000, 0 - 20mA, 4 - 20mA, 0 - 10V, 0 - 1V, 0 - 5V, DI)
14	Pb10	Configurable analogue input 10 (NTC, PTC, PT1000, 0 - 20mA, 4 - 20mA, 0 - 10V, 0 - 1V, 0 - 5V, DI)
15	+5V	Additional power +5Vdc
16	+12V	Additional power +12Vdc
21	Out1	Opto-insulated analogue output 1 0 - 10V
22	Out2	Opto-insulated analogue output 2 0 - 10V
23	Out3	Opto-insulated analogue output 3 0 - 10V
24	Out4	Opto-insulated analogue output 4 0 - 10V
25	GND(-)	Common opto-insulated analogue output
26	Out5	Analogue output 5 0 - 10V, 4 - 20mA, Opto-insulated relay
27	Out6	Analogue output 6 0 - 10V, 4 - 20mA, Opto-insulated relay
28	Supply	Power for opto-insulated analogue outputs at 24Vac or 24Vdc(-)
29	Supply	Power for opto-insulated analogue outputs at 24Vac or 24Vdc(+)
30	GND(-)	Common opto-insulated analogue output
40	DI1	Opto-insulated digital input 1
41	DI2	Opto-insulated digital input 2
42	DI3	Opto-insulated digital input 3
43	DI4	Opto-insulated digital input 4
44	DI5	Opto-insulated digital input 5
45	DI6	Opto-insulated digital input 6
46	DI7	Opto-insulated digital input 7
47	DI8	Opto-insulated digital input 8

48	DI9	Opto-insulated digital input 9
49	DI10	Opto-insulated digital input 10
50	GND(-)	Reference “-“ for opto-insulated digital inputs 1 to 20 (if inputs 24Vac or 24Vdc)
51	DI11	Opto-insulated digital input 11
52	DI12	Opto-insulated digital input 12
53	DI13	Opto-insulated digital input 13
54	DI14	Opto-insulated digital input 14
55	DI15	Opto-insulated digital input 15
56	DI16	Opto-insulated digital input 16
57	DI17	Opto-insulated digital input 17
58	DI18	Opto-insulated digital input 18
59	DI19	Opto-insulated digital input 19
60	DI20	Opto-insulated digital input 20
61	IDC	Common opto-insulated digital inputs 1 to 20 (if potential free inputs)
70	RL1	Relay 1 normally open contact
71	RL2	Relay 2 normally open contact
72	RL3	Relay 3 normally open contact
73	C	Common relays 1, 2, 3 and 4 (MAX 6A)
74	RL4	Relay 4 normally open contact
75	RL3	Relay 3 normally closed contact
76	C	Common relays 5, 8 and 9 (MAX 6A)
77	RL5	Relay 5 normally open contact
78	RL6	Relay 6 normally open contact
79	RL7	Relay 7 normally open contact
80	RL8	Relay 8 normally open contact
81	RL9	Relay 9 normally open contact
82	RL10	Relay 10 normally open contact
83	C	Common relays 6, 7 and 10 (MAX 6A)
84	RL11	Relay 11 normally open contact
85	RL12	Relay 12 normally open contact
86	RL13	Relay 13 normally open contact
87	C	Common relays 12, 13 and 15 (MAX 6A)
88	C	Common relays 12, 13 and 15 (MAX 6A)
89	RL11	Relay 11 normally closed contact
90	C	Common relays 11 and 14 (MAX 6A)
91	RL14	Relay 14 normally open contact
92	RL14	Relay 14 normally closed contact
93	RL15	Relay 15 normally open contact
100	CAN Bus	CAN Bus connection (+), not open
101	CAN Bus	CAN Bus connection (-), not open
102	CAN Bus	CAN Bus connection (insulated gnd), not open
103	LAN	LAN Connection (+)
104	LAN	LAN Connection (-)
120	RL16	SSR relay 16 normally open contact
121	C	Common relays 16, 17, 18 and 19
122	RL18	SSR relay 18 normally open contact
123	RL17	SSR relay 17 normally open contact
124	C	Common relays 16, 17, 18 and 19
125	RL19	SSR relay 19 normally open contact
126	RL20	Relay 20 normally open contact


127	RL21	Relay 21 normally open contact
128	C	Common relays 20, 21, 22, 23, 24 and 25 (MAX 6A)
129	RL22	Relay 22 normally open contact
130	RL23	Relay 23 normally open contact
131	RL24	Relay 24 normally open contact
132	C	Common relays 20, 21, 22, 23, 24 and 25 (MAX 6A)
133	RL25	Relay 25 normally open contact

4.9.3 Technical specifications


4.9.3.1 Analogue inputs

Analogue conversion type:	10-bit A/D converter
Number of inputs:	10
Type of analogue input: (configurable via software parameter)	NTC Dixell (-50T110°C; 10KΩ±1% at 25°C) PTC Dixell(-55T115°C; 990Ω±1% at 25°C) PT1000 Dixell (-100T150°C; 1KΩ at 0°C) Digital input (potential free contact) Voltage: 0 - V, 0 - 5V, 0 - 10V (input resistance 15KΩ) Current: 0 - 20mA, 4 - 20mA (input resistance 100Ω)
Digital input status variation detection time:	100ms (in any case it depends on the cycle time set by the user in the given application)
Accuracy:	NTC, PTC, PT1000: ±1°C 0-1V: ±20mV 0-5V: ±100mV 0-10V:±200mV 2-20mA, 4-20mA: ±0.30mA
Additional power:	+12V: 200mA max +5v: 100mA
Notes: 	Any inputs that are powered with a voltage that differs from that supplied by the device (+12V or +5V) must be powered separately with another transformer (do not use the same secondary of the controller's power) in order to prevent the inputs from malfunctioning or being damaged.


4.9.3.2 Digital inputs

Type: (configurable via software parameter)	Opto-insulated potential free or live contact (24Vac/dc) External power 24Vac/dc ±20%
Number of inputs:	20
Digital input status variation detection time:	100ms (in any case it depends on the cycle time set by the user in the given application)
Notes: 	If the digital inputs are used with voltage, use another transformer (do not use the same secondary of the controller's power) in order to prevent the inputs from malfunctioning or being damaged.


4.9.3.3 Analogue outputs

Type:	Opto-insulated with separate 24Vac/dc power supply
Number of outputs:	6
Type of analogue output: (configurable via software parameter)	4 fixed outputs 0-10Vdc (Out1 - Out4) 2 configurable outputs 0-10Vdc, 4-20mA (Out5 and Out6)
Maximum load:	40mA (Out1 - Out4) 20mA (Out5 and Out6) max with configured outputs 0-10Vdc 400Ω max with configured outputs 4-20mA 22Ω per live analogue output
Accuracy:	Out1 - Out4: ±2% full scale Out5 – Out6: ±2% full scale
Resolution:	8bit
Notes: 	The electrical devices controlled by these analogue outputs must be powered separately with another transformer (do not use the same secondary of the controller's power) in order to prevent the outputs from malfunctioning or being damaged.

4.9.3.4 Digital outputs


Type:	Relays with NO, NC and SSR contacts
Number of outputs:	25
Type of output: (configurable via software parameter)	Relays with normally open contact: - RL1, RL2, RL4, RL5, RL6, RL7, RL8, RL9, RL10, RL12, RL13, RL15, RL20, RL21, RL22, RL23, RL24, RL25 Relays with changeover contact: - RL3, RL11, RL14 SSR relays: - RL16, RL17, RL18, RL19
Maximum load:	Relays with normally open contact: 5A(250Vac) SPST 5(2)A Relays with changeover contact: 8A(250Vac) SPDT 8(3)A SSR relays with normally open contact 1A(12 - 250Vac): - only in AC load - minimum current is 50mA (equivalent to 12W - 250Vac) - internal impedance 300KΩ (current 0.2mA at 250Vac with an open contact)
Notes: 	Verify the capacity of the output used. There is double insulation between the digital outputs and the low voltage of the rest of the circuit. Do not use different voltages for the various groups of relays nor within each group.

4.9.3.5 Wiring diagrams

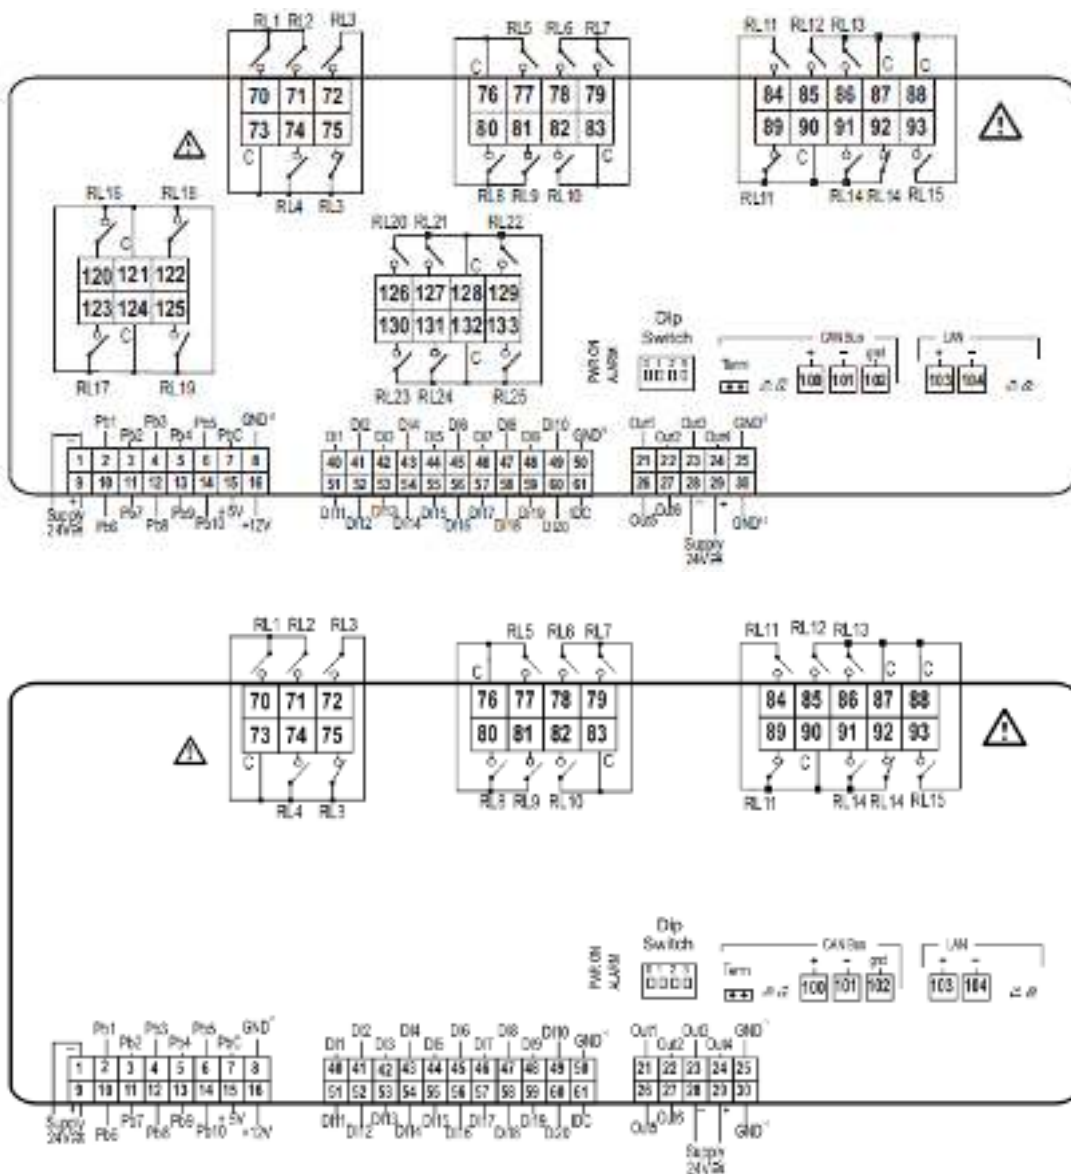

4.9.3.6 Mechanical specifications

10 DIN module

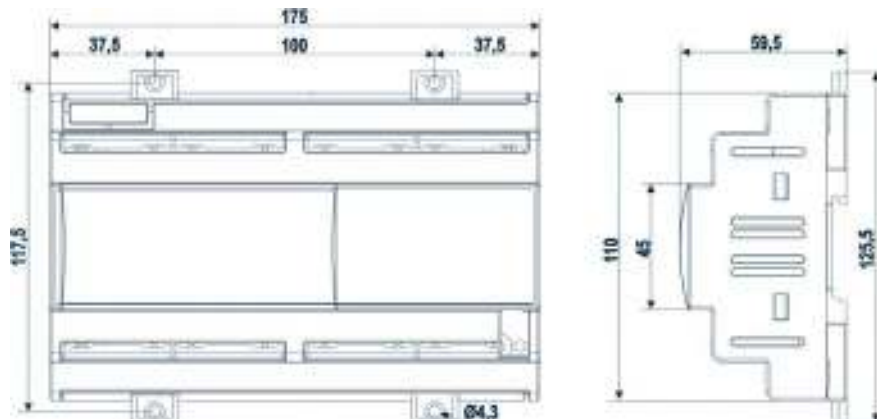

4.9.3.7 Electrical specifications

Power Supply:	24Vac +10/-15%, 50/60Hz 20 - 36Vdc
Consumption:	20VA (Vac), 15W (Vdc)
Connectors:	Molex connectors with low voltage wiring SELECOM/CIVILUX connectors for digital outputs (250Vac, 6A max)

4.9.3.8 Plastic container

Mount:	On a DIN rail (EN 50022, DIN 43880) Fastened with screws via the removable plastic flaps.
Material:	PC-ABS Thermoplastic
Self-extinguishing:	V0 (UL94)
Comparative Tracking Index (CTI):	300V
Colour:	Black

4.9.3.9 Setting the address of the device

The address of the device is set via a dip-switch and numbering is binary as shown in the table below:

	1	2	3	4
Adr. 0	OFF	OFF	OFF	OFF
Adr. 1	ON	OFF	OFF	OFF
Adr. 2	OFF	ON	OFF	OFF
Adr. 3	ON	ON	OFF	OFF
Adr. 4	OFF	OFF	ON	OFF
Adr. 5	ON	OFF	ON	OFF
Adr. 6	OFF	ON	ON	OFF
Adr. 7	ON	ON	ON	OFF
Adr. 8	OFF	OFF	OFF	ON
Adr. 9	ON	OFF	OFF	ON
Adr. 10	OFF	ON	OFF	ON
Adr. 11	ON	ON	OFF	ON
Adr. 12	OFF	OFF	ON	ON
Adr. 13	ON	ON	ON	ON





Not used

If the address is changed while the device is switched on, to confirm the new address remember to switch off and switch on again the device.

6. MEANING OF THE LEDS AND JUMPERS IN THE VARIOUS DEVICES



6.1 PROGRAMMABLE CONTROLLERS

LEDs are present in the programmable controllers in order to indicate the status of the device.

	PWR ON	<p>PWR ON (green):</p> <ul style="list-style-type: none"> - if on, the device is powered
	LED1 ALARM	<p>LED1 (yellow):</p> <ul style="list-style-type: none"> - if on, the system is being updated. - if it flashes, the update has been completed. <p>ALARM (red):</p> <ul style="list-style-type: none"> - if on, the system is malfunctioning. <p>LED1 (yellow) + ALARM (red):</p> <ul style="list-style-type: none"> - if both flash, the device is functioning correctly.
	TX RX	<p>TX (yellow):</p> <ul style="list-style-type: none"> - if it flashes, the device is transferring data. <p>RX (yellow):</p> <ul style="list-style-type: none"> - if it flashes, the device is receiving data.
	JMP1	<p>JMP1:</p> <ul style="list-style-type: none"> - if the JMP1 jumper is short-circuited, the system creates a virtual IP in order to have access to the internal website. The default IP address is 192.168.0.250 (the IP address set in the iPRO always remains the same). <p>Remove the Jumper, switch the iPRO off and on again to restore the system back to the previous conditions.</p> <p>CAUTION: this mode can only be used if the FIRMWARE version of the iPRO is 2010011300 (or higher).</p>

6.2 EXPANSION MODULES

LEDs are present in the expansion modules in order to indicate the status of the device.

	PWR ON ALARM	<p>PWR ON:</p> <ul style="list-style-type: none"> - If on, the device is powered <p>ALARM:</p> <ul style="list-style-type: none"> - if on, the system is malfunctioning. Therefore, verify the CANBus or LAN connection or the configuration/connection of the analogue inputs.
	TX RX	<p>TX:</p> <ul style="list-style-type: none"> - if it flashes, the device is transferring data. <p>RX:</p> <ul style="list-style-type: none"> - if it flashes, the device is receiving data.

7. INSTALLATION

The devices must not be installed in environments where the following situations are present:

- Temperature and humidity outside the range stipulated in the data plate. Frequent and sudden changes in temperature and/or humidity
- Direct sunlight and weathering in general
- High mechanical stress (vibrations and/or knocks)
- Sulphur and ammonia gas, smoke and salt spray that can cause corrosion and/or oxidation
- Presence of flammable or explosive gas
- Dust
- Devices that generate magnetic interference

Position the device inside the electrical panels, paying attention to the following:

- the distance between the device and the electrical power components
- the distance between the device and the power cables
- sufficient passage for the cooling air

Always comply with the laws and regulations applicable in the country where the device is installed.

Always protect the device for it to always be accessible solely by authorised personnel.

In case of malfunctions, always contact the relative distributor for the device to be repaired.

7.1 GENERAL RULES

Comply with the following recommendations during the installation process in order to prevent the device from malfunctioning.

- Separate the signal cables from the power cables (it is recommended to use BELDEN 8772-type shielded cables)
- Separate the cables of the analogue inputs from those of the digital inputs and the serial line cables from the power cables (resistive as well as inductive), in order to prevent malfunction due to electromagnetic interference
- Separate the power of the device from that of the other electrical components
- Never connect the secondary of the supply transformer to the earth
- The low voltage connections must have reinforced insulation

7.2 POWER SUPPLY

The power supply voltage of the devices is as follows:

- 24Vac +10/-15%, 50/60Hz (consumption 20VA) or 20 - 36Vdc (consumption 15W) for the programmable controllers 10 and expansion 10 DIN
- 24Vac +10/-15%, 50/60Hz (consumption 30VA) or 20 - 36Vdc (consumption 25W) for the 4 DIN programmable controllers
- 24Vac +10/-15%, 50/60Hz (consumption 10VA) or 20 - 36Vdc (consumption 10W) for the 4 DIN expansion.

Be careful to always comply with the following recommendations:

- Never use power that differs from that indicated as the devices may be damaged.
- Always use safety transformers
- Always separate the power of the controller from that of all the other electrical devices present in the system.
- The secondary of the supply transformer of the devices must never be connected to the earth.

7.3 CONNECTION OF THE ANALOGUE INPUTS

The analogue inputs in the programmable controllers and expansions are fully configurable. NTC or PTC, 0 - 20mA, 4 - 20mA, 0 - 10V, 0 - 1V or 0 - 5V type of sensors can be used. The analogue inputs can also be used as digital inputs (potential free - not live).


NOTE: Any devices that require 24Vac/dc power supply must be powered separately with another transformer.




7.3.1 Temperature probes (NTC and PTC)

2-row sensors that do not require polarity to be respected. Each sensor must be connected through one of the inputs (from Pb1 to Pb10) and the common (PbC) as shown in the diagram below.

IPG-IPC

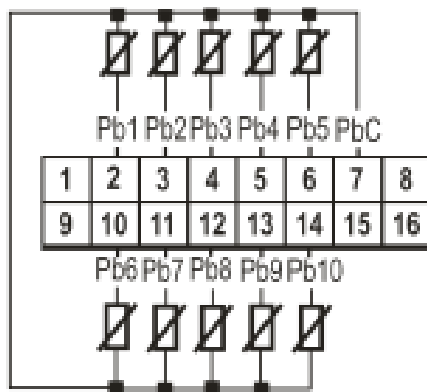

IPG-IPC 4 DIN

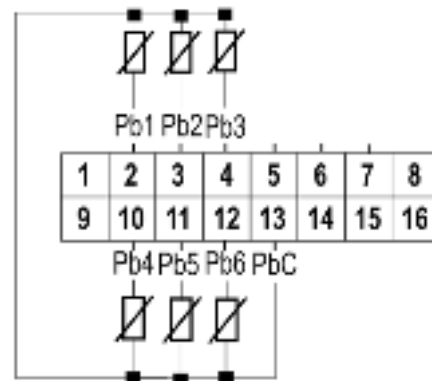


Recommendations:

- follow the diagram of the device used, for the numbering.
- the configuration is determined by the application.
- if used as a digital input (potential free - not live), use the same connection configuration of the sensors.

7.3.2 Temperature probes IPG800 Series (NTC, PTC and PT1000)

2 wires sensors that do not require polarity to be respected. Each sensor must be connected through one of the inputs (from Pb1 to Pb7) and the common (Com) as shown in the diagram below.

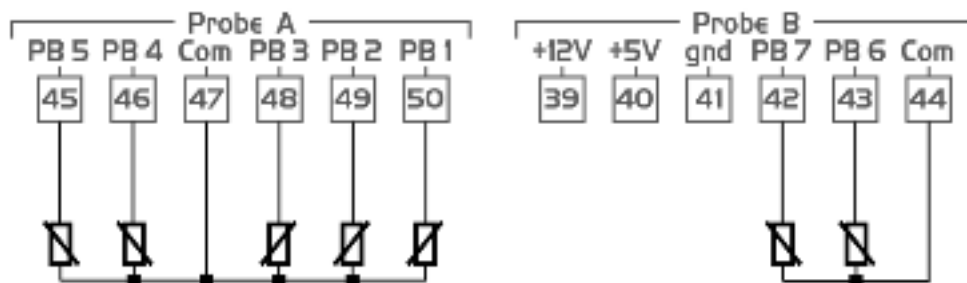

Recommendations:


- follow the diagram of the device used, for the numbering.
- the configuration is determined by the application.
- if used as a digital input (potential free - not live), use the same connection configuration of the sensors.

7.3.3 Pressure transducers and current probes (0 - 20mA, 4 - 20mA)


2-row sensors that require +12Vdc power supply.

Each sensor must be connected through one of the inputs (from Pb1 to Pb10) and the power supply (+12V) as shown in the diagram below.

IPG-IPC

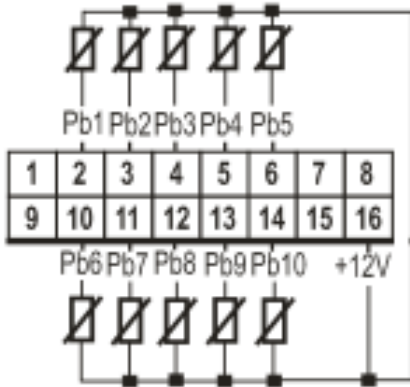

IPG-IPC 4 DIN

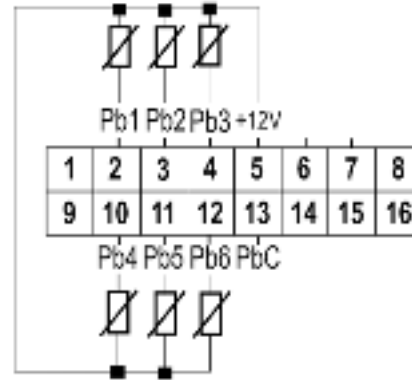


Recommendations:

- follow the diagram of the device used, for the numbering.
- the configuration is determined by the application.

7.3.4 Pressure transducers and current probes IPG800 Series (0 - 20mA, 4 - 20mA)

2-row sensors that require +12Vdc power supply.

Two sensors must be connected through one of the inputs (from Pb6 to Pb7) and the power supply (+12V) as shown in the diagram below.

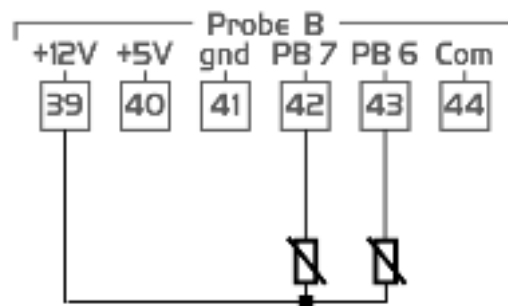

Recommendations:


- follow the diagram of the device used, for the numbering.
- the configuration is determined by the application.

7.3.5 Pressure transducers and ratiometric pressure transducers (0 - 5V)


3-row sensors that require +5Vdc power supply.

Each sensor must be connected through one of the inputs (from Pb1 to Pb10) and the power supply (+5V/GND) as shown in the diagram below.

IPG-IPC

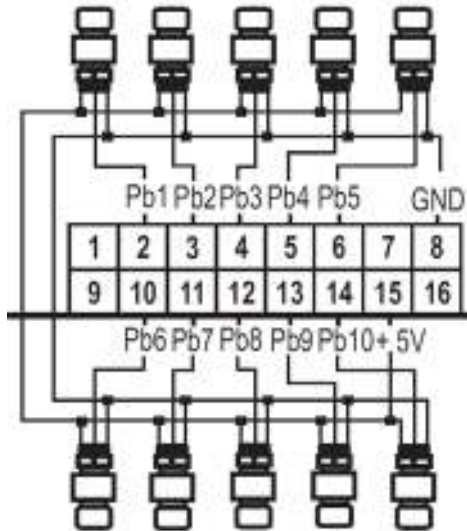

IPG-IPC 4 DIN

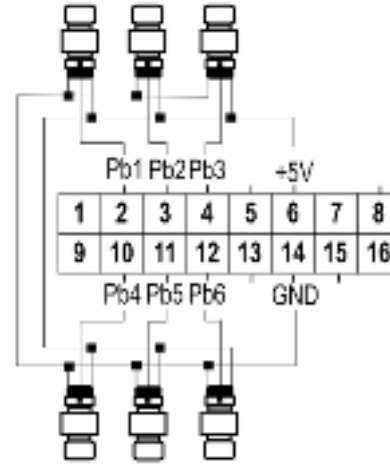


Recommendations:

- follow the diagram of the device used, for the numbering.
- the configuration is determined by the application.

7.3.6 Pressure transducers and ratiometric pressure transducers IPG800 Series (0 - 5V)

3-row sensors that require +5Vdc power supply.

Two sensors must be connected through one of the inputs (from Pb6 to Pb7) and the power supply (+5V/GND) as shown in the diagram below.

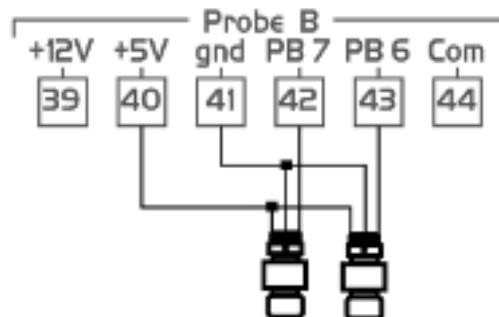

Recommendations:


- follow the diagram of the device used, for the numbering.
- the configuration is determined by the application.

7.3.7 Live probes (0 - 1V, 0 - 5V, 0 - 10V)


3-row sensors that require +12Vdc power supply.

Each sensor must be connected through one of the inputs (from Pb1 to Pb10) and the power supply (+12V/GND) as shown in the diagram below.

IPG-IPC

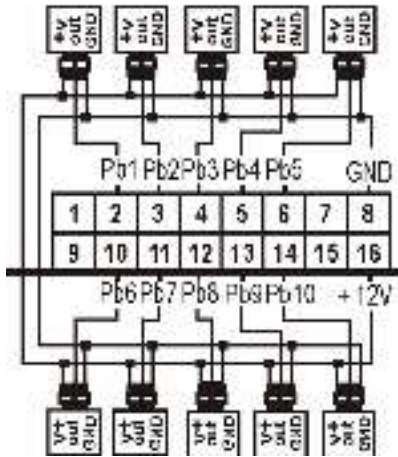

IPG-IPC 4 DIN

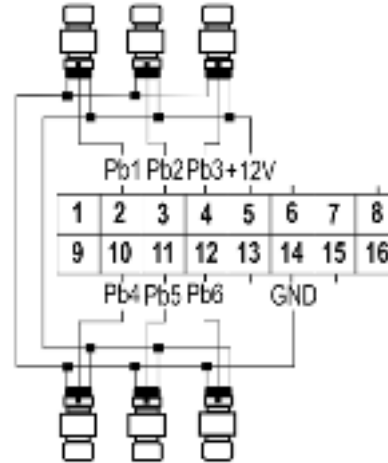


Recommendations:

- follow the diagram of the device used, for the numbering.
- the configuration is determined by the application.

7.3.8 Live probes IPG800 Series (0 - 1V, 0 - 5V, 0 - 10V)

3-row sensors that require +12Vdc power supply.

Two sensors must be connected through one of the inputs (from Pb6 to Pb7) and the power supply (+12V/GND) as shown in the diagram below.

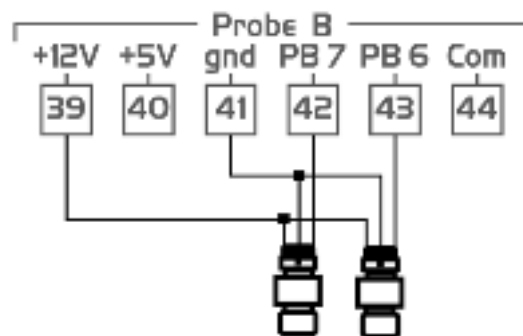

Recommendations:

- follow the diagram of the device used, for the numbering.
- the configuration is determined by the application.



7.3.9 Probes and transducers with 24Vac/dc power supply

3 or 4-row sensors that require +24Vac/dc power supply

Each sensor must be connected through one of the inputs (from Pb1 to Pb10), whereas the power supply as shown in the diagram below.

This is an example for versions IPG-IPC.

For all the others version, verify the correct number of the pin in the connector.

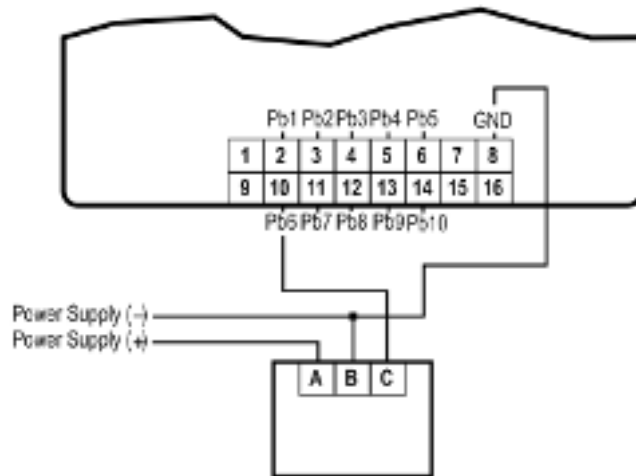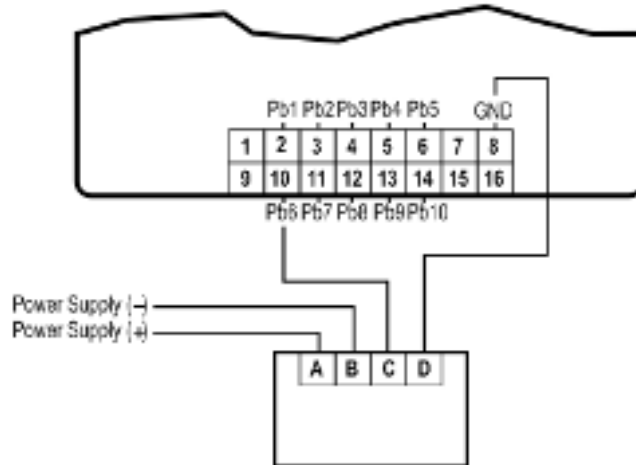


Recommendations:

- respect the “+” and “-” polarities of the power supply.
- the power supply of the sensor must be separate from that of the programmable controller
- follow the diagram of the device used, for the numbering.
- the configuration is determined by the application.

7.3.10 Probes and transducers with 24Vac/dc power supply IPG800 Series

3 or 4-row sensors that require +24Vac/dc power supply

Each sensor must be connected through one of the inputs (from Pb6 to Pb7), whereas the power supply as shown in the diagram below.

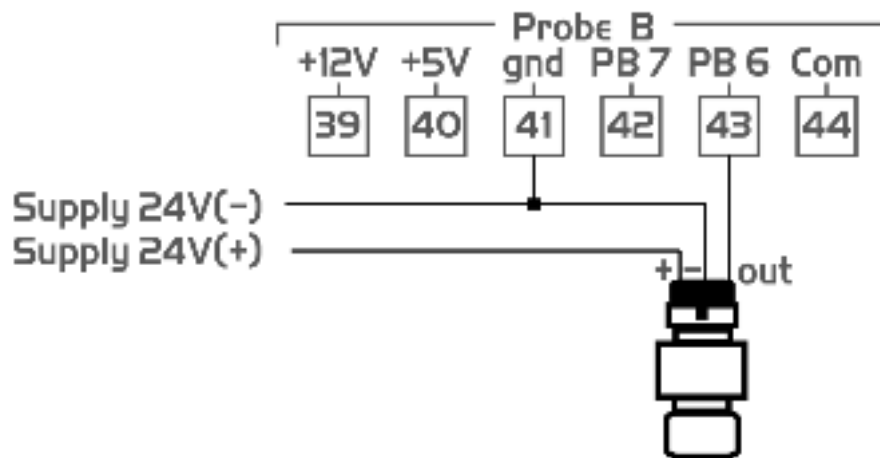

Recommendations:


- respect the "+" and "-" polarities of the power supply.
- the power supply of the sensor must be separate from that of the programmable controller
- follow the diagram of the device used, for the numbering.
- the configuration is determined by the application.

7.4 CONNECTION OF THE DIGITAL INPUTS


The digital inputs in the programmable controllers and expansions are fully configurable. Depending on the model used, the digital inputs can be used as potential free or live (24Vac/dc) digital inputs.

7.4.1 Potential-free digital inputs


IPG100, IPC100 and IPX106D versions

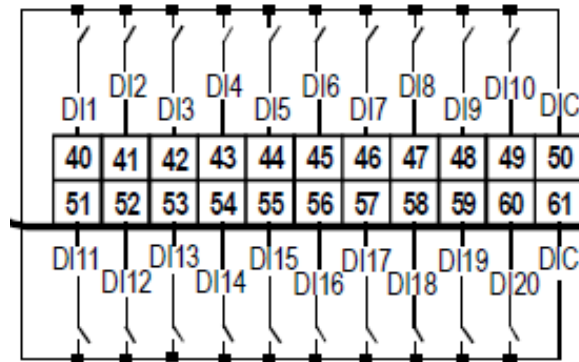

IPG200, IPX125D, IPX115D, IPX215D, IPX215D VERSIONS

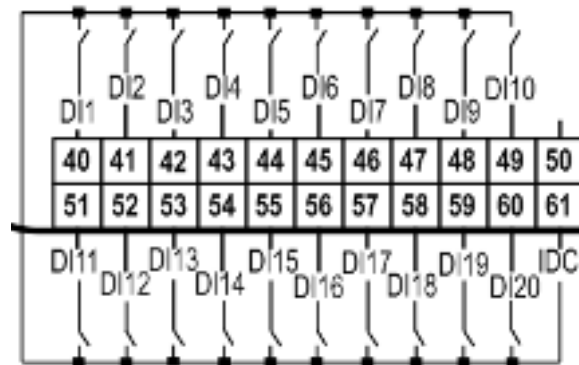

IPG108D, IPG208D VERSION (special version not standard version)

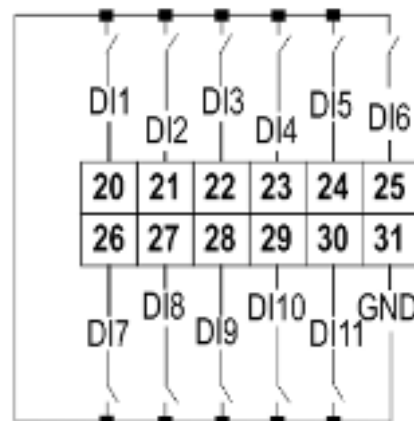

Recommendations:

- follow the diagram of the device used, for the numbering.
- the configuration is determined by the application.


7.5 CONNECTION OF THE ANALOGUE OUTPUTS

Depending on the model and configurations, it is possible to use analogue outputs such as 0 - 10Vdc, 4 - 20mA or PWM (the PWM configuration requires the Dixell XVxx module to be used for the fan speed to be controlled).


NOTE: the analogue outputs in certain models are not opto-insulated. In this case, any devices that require 24Vac/dc power supply must be powered separately with another transformer.

7.5.1 0 - 10V, 4 - 20mA Analogue output for condensation control

IPG-IPC VERSION

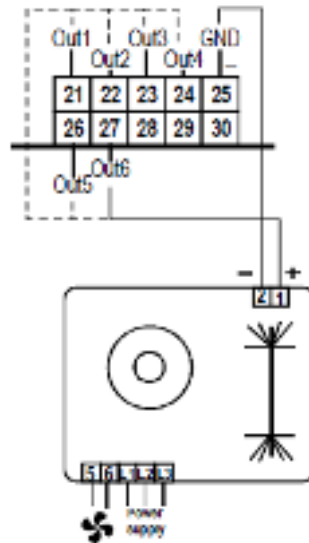

IPG108, IPG208 VERSION

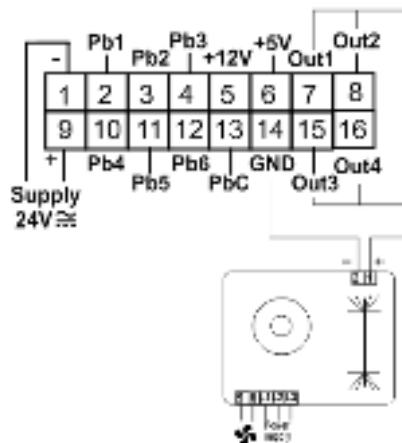


Recommendations:

- follow the diagram of the device used, for the numbering.
- the configuration is determined by the application.

7.5.2 0-10Vdc, 4-20mA Analogue output for fan speed control IPG800 Series

The three analog outputs AO1, AO2 and AO3 can be used to drive an external fan speed control (Dixell XV series) through the 0-10Vdc or 4-20mA.

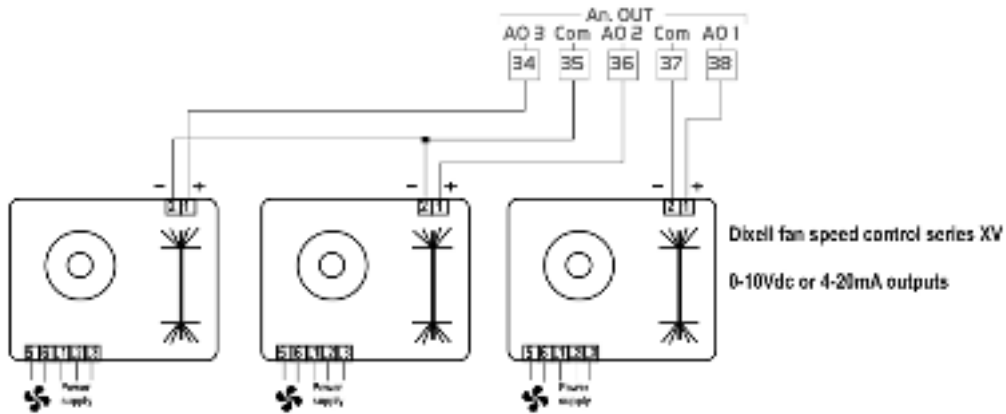


Recommendations:

- follow the diagram of the device used, for the numbering.
- the configuration is determined by the application.

7.5.3 PWM analogue output for condensation control

IPG100 VERSIONS (not available for IPG200 and 4 DIN)

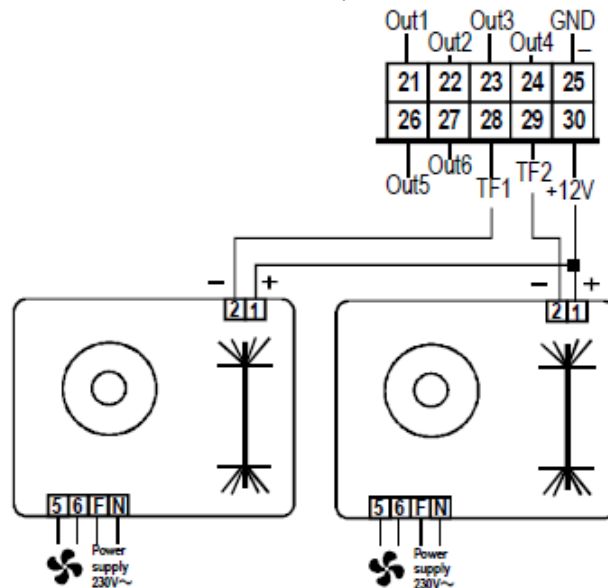


Recommendations:

- follow the diagram of the device used, for the numbering.
- the configuration is determined by the application.

7.5.4 PWM analogue output for control IPG800 Series

The analog outputs AO1 (depend on the model), can be used to drive an external fan speed control (Dixell XV series) through the PWM signal.

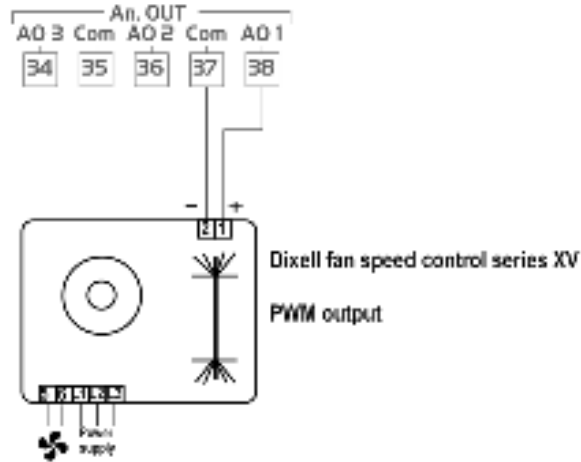


Note: the PWM is available only if the Power Supply is 24Vac.

Recommendations:


- follow the diagram of the device used, for the numbering.
- the configuration is determined by the application.

7.5.5 0 - 10V, 4 - 20mA Proportional analogue output for servomotors/actuators

IPG-IPC

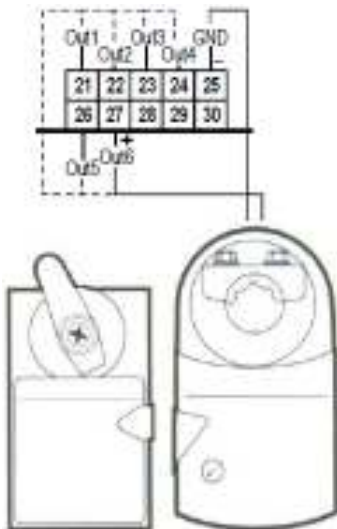

IPG 4 DIN

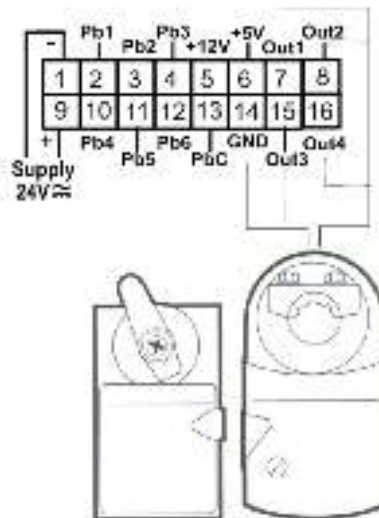

Recommendations:

- follow the diagram of the device used, for the numbering.
- the configuration is determined by the application.



7.5.6 Devices with 24Vac/dc power supply

3 or 4-row devices that require +24Vac/dc power supply

Each device must be connected through one of the outputs (from Out1 to Out6), whereas the power supply as shown in the diagram below.

This is an example for versions IPG-IPC.

For all the others version, verify the correct number of the pin in the connector.

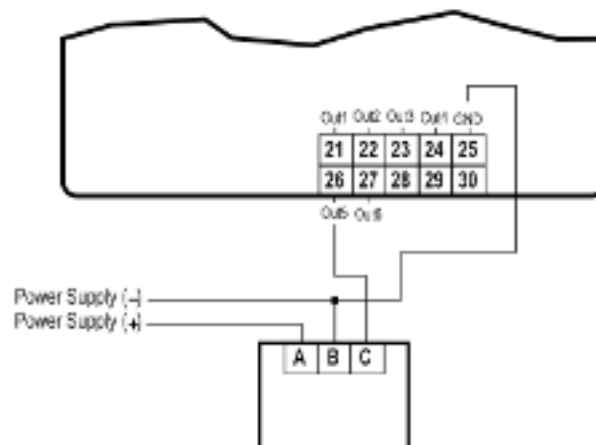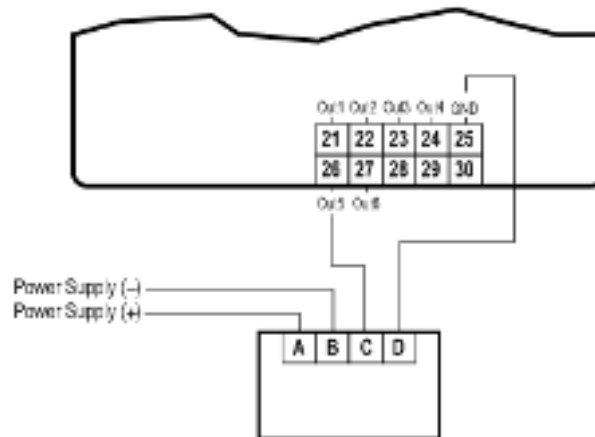


Recommendations:


- respect the "+" and "-" polarities of the power supply.
- the power supply of the device must be separate from that of the programmable controller
- follow the diagram of the device used, for the numbering.
- the configuration is determined by the application.

7.5.7 Analogue output for relays (coil power supply 12Vdc)

IPG-IPC

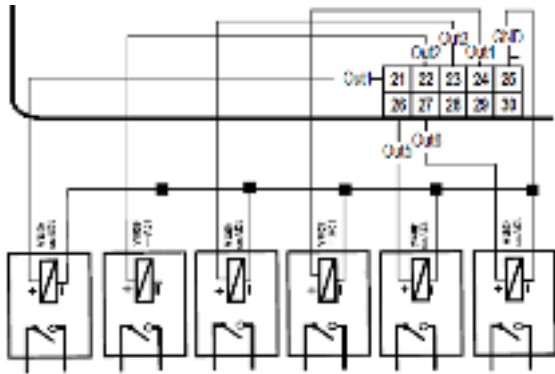

IPG 4 DIN

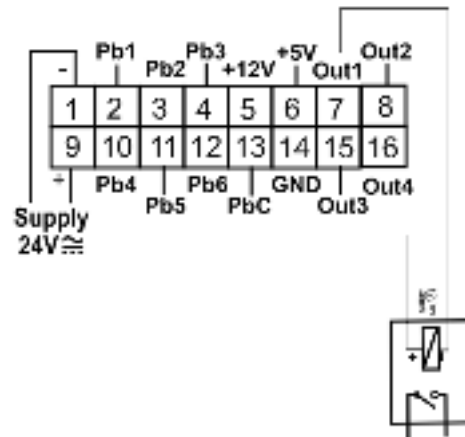

Recommendations:

- follow the diagram of the device used, for the numbering.
- the configuration is determined by the application.

7.6 CONNECTION OF THE DIGITAL OUTPUTS

Depending on the model, the digital outputs can have different connection specifications. The relays have been split into groups, each with a separate common. The same voltage must always be used for the various groups of relays and within each group. For the electrical specifications, refer to the relative paragraphs of the different models.

Certain models have SSR relays (solid state relay), which are suitable to control devices where numerous commutations are required, which would not be supported by an electromechanical relay. For the electrical specifications, refer to the specifications of the model using such relays.

Dixell



Dixell S.r.l. - Z.I. Via dell'Industria, 27 - 32010 Alpago (BL) ITALY
Tel. +39.0437.983311 - Fax +39.0437.989313 - EmersonClimate.com/Dixell - dixell@emerson.com